

HazLoc LED LUMINAIRE

Installation and Maintenance Manual

HazLoc L1319 series



Top Hi-Tech Co., Ltd.
9F, No.1, Zhongshan Road, Tucheng
Dist. New Taipei City, 23680,236
Taiwan

Website: www.tht-ex.com
TEL: +886 2 2267-1234
FAX: +886 2 2269-1166
e-mail: sales@tht-ex.com

Pub. Code:
Subject to alterations

1. General Information

HazLoc L1319 LED Luminaires are suitable for use in the following hazardous (classified) areas as defined by the National Electrical Code (NEC) and Canadian Electrical Code (CEC):

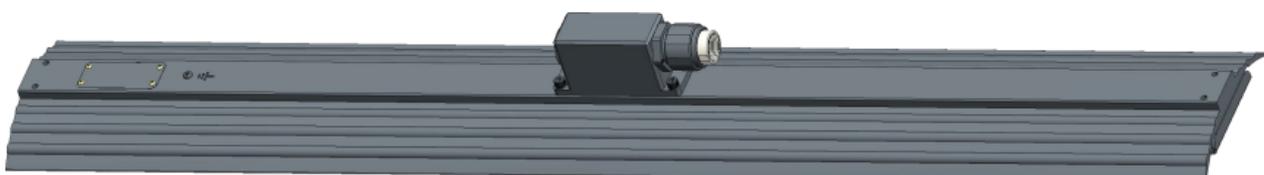
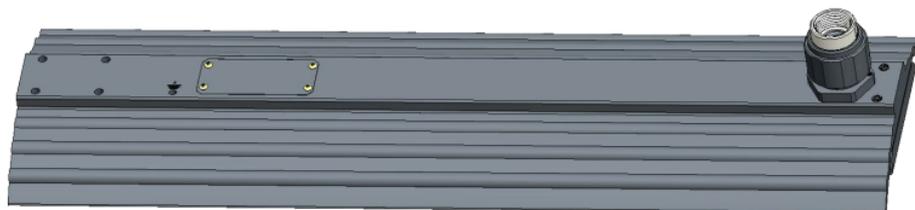
- Class I, Division 2, Groups A, B, C, D
- Class II, Division 2, Groups F, G

Wet Locations (UL 1598)

Refer to the luminaire nameplate for specific classification information, maximum ambient temperature suitability and corresponding operating temperature (T-Code).

HazLoc L1319 LED Luminaire is designed for using in indoors and outdoors environment.

Ambient Temperature Range: -40°C ~ +55°C











WARNING






















- To avoid the risk of fire, explosion or electric shock, this product should be installed, inspected and maintained by a qualified electrician only, in accordance with all applicable codes and regulations.
- To avoid electric shock:
 - ✓ Be certain electrical power is OFF before and during installation and maintenance.
 - ✓ Luminaire must be supplied by a wiring system with an equipment grounding conductor.
- To avoid explosion:
 - ✓ Make sure that the supply voltage is the same as the luminaire voltage.
 - ✓ Do not install where the marked operating temperatures exceed the ignition temperature of the hazardous atmosphere.
 - ✓ Do not operate in ambient temperatures above those indicated on the luminaire nameplate.
 - ✓ All gasket seals must be clean and undamaged.
 - ✓ Use proper supply wiring as specified on the luminaire nameplate.
 - ✓ Before dismounting, electrical power to the luminaire must be turned off. Keep tightly closed when in operation.
- To avoid burning hands, ensure the luminaire is cool when performing maintenance.

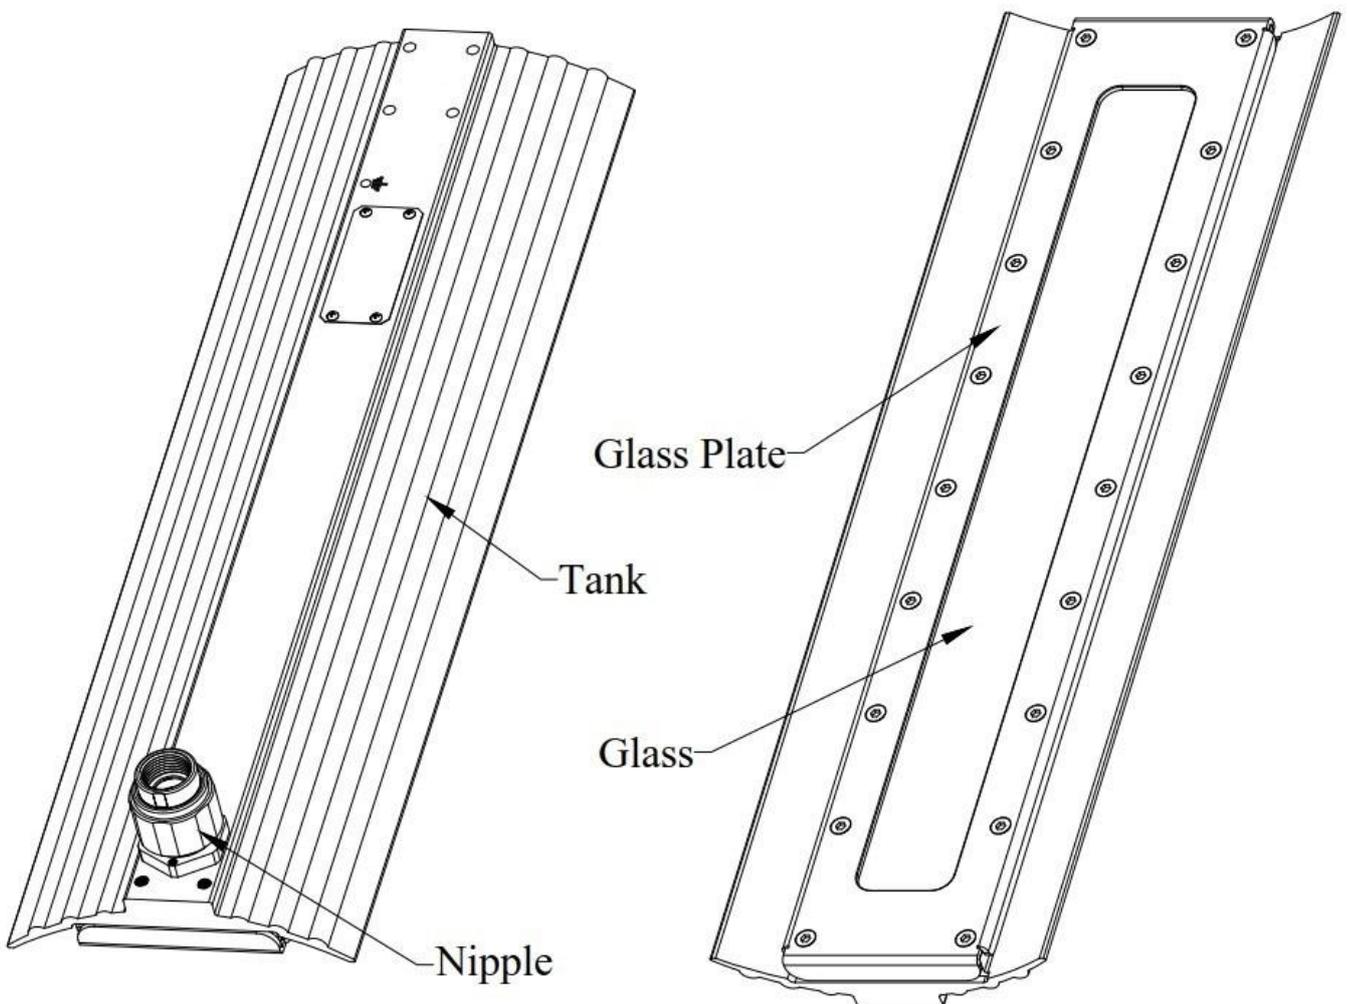 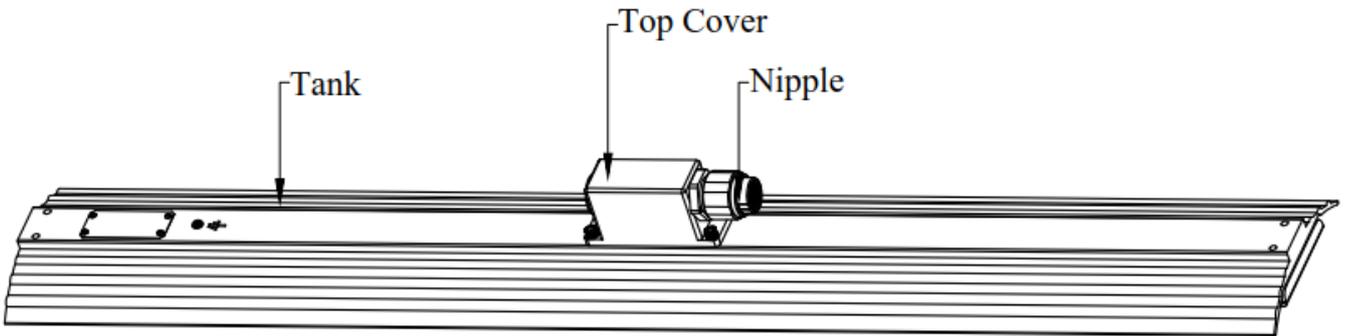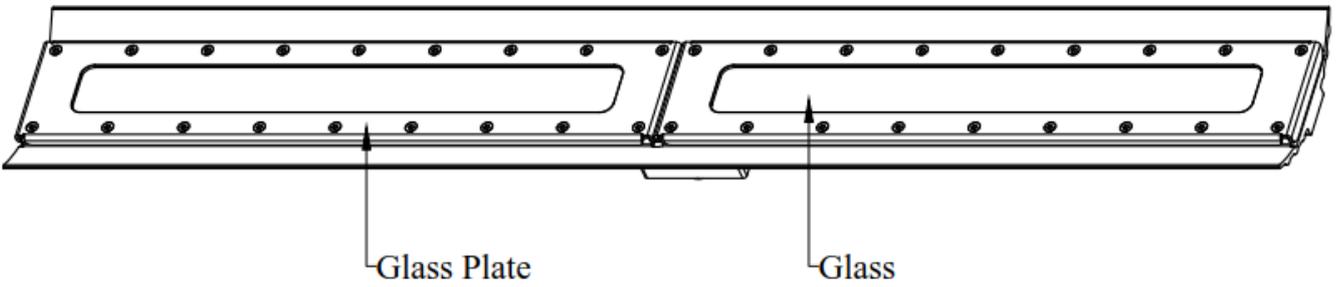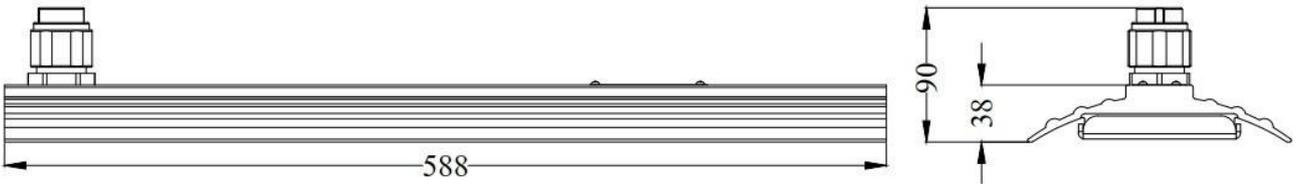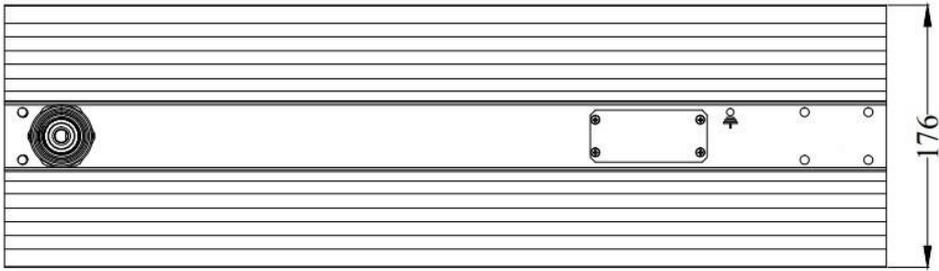
2. Dimensions (All Dimensions in mm) – Subject to Alterations





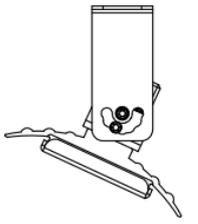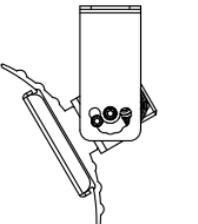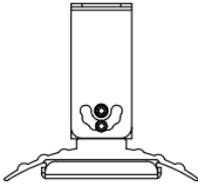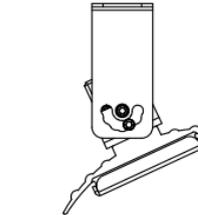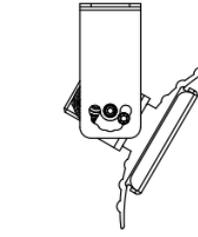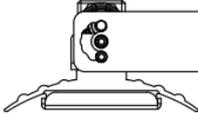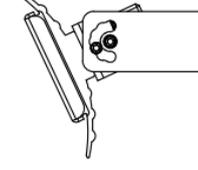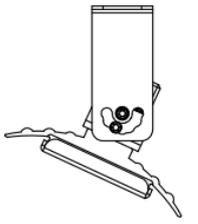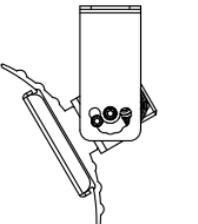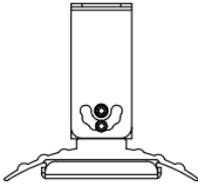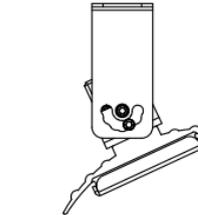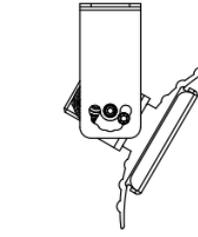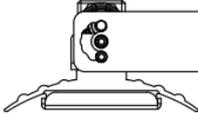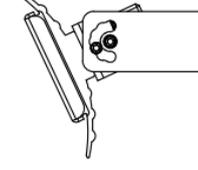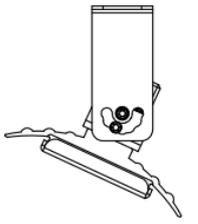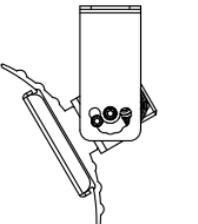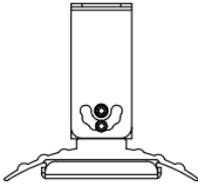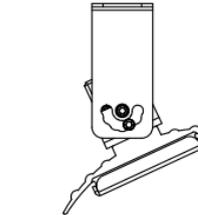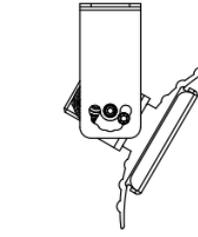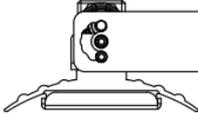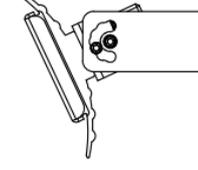3. Technical Data


Item	Description																
Rated Voltage	120/ 277/ 347/ 480 Vac (Note information on type label)																
Watts ($\pm 10\%$)	40/ 60/ 80/ 120 Watts (347Vac and 480Vac has 80W only)																
Frequency	50/60 Hz																
Power Factor	$\cos > 0.9$																
Degree of protection	IP67																
Ambient Temperature Range	$-40^{\circ}\text{C} \sim +55^{\circ}\text{C}$																
Material Enclosure Glass	Aluminum alloy Heat and impact resistant tempered Glass																
LED Service Life	50,000 hrs.																
Mounting Type	WHT Mounting																
	<table border="0" style="width: 100%; text-align: center;"> <tr> <td data-bbox="357 891 577 967">Lens facing down 90° from vertical</td> <td data-bbox="657 891 877 967">Lens facing down 25° from vertical</td> <td data-bbox="944 891 1165 967">Lens facing down 60° from vertical</td> <td data-bbox="1232 891 1452 922">Lens facing horizontal</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table>	Lens facing down 90° from vertical	Lens facing down 25° from vertical	Lens facing down 60° from vertical	Lens facing horizontal												
	Lens facing down 90° from vertical	Lens facing down 25° from vertical	Lens facing down 60° from vertical	Lens facing horizontal													
																	
																	
																	
Street type electrical tube Mounting																	

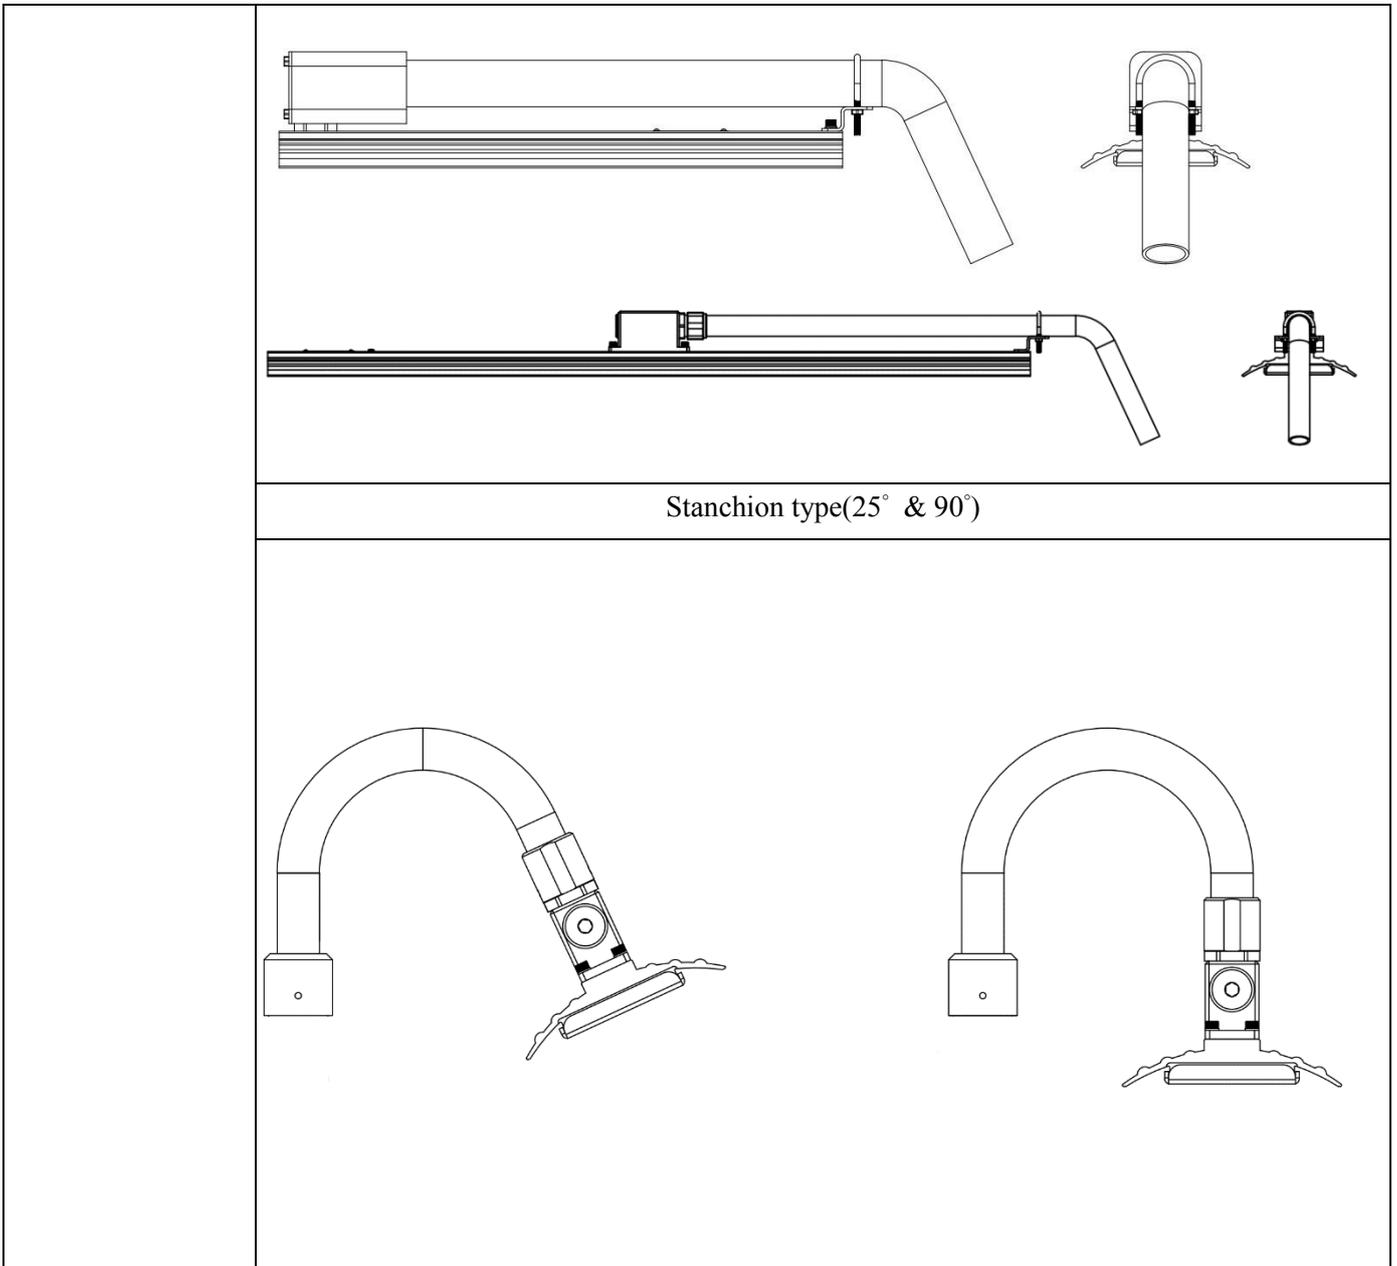

4. Assembly and Installation


4.1 Electrical Connection

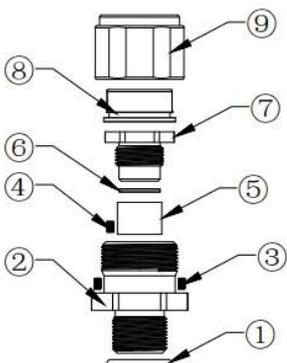Overview of Connection Base :





1. Nipple Body Gasket	4. M4 Socket Set Screws	7. Pressure Nut
2. Nipple Body	5. Tube	8. Connector
3. M4 Socket Set Screws	6. Washer	9. Sleeve

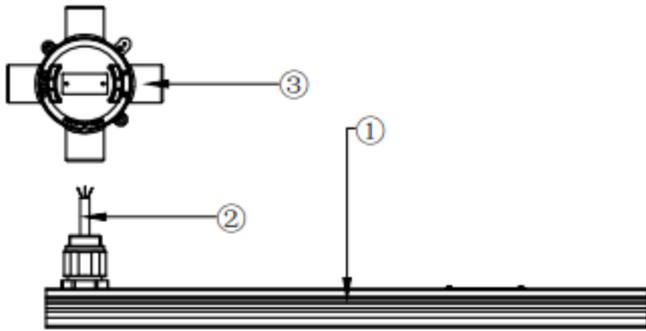Overview of Electrical Connection :



1	L1319 Type Luminaire
2	Cord (Length: min 24 inches)
3	Junction Box (Provide by Customer)

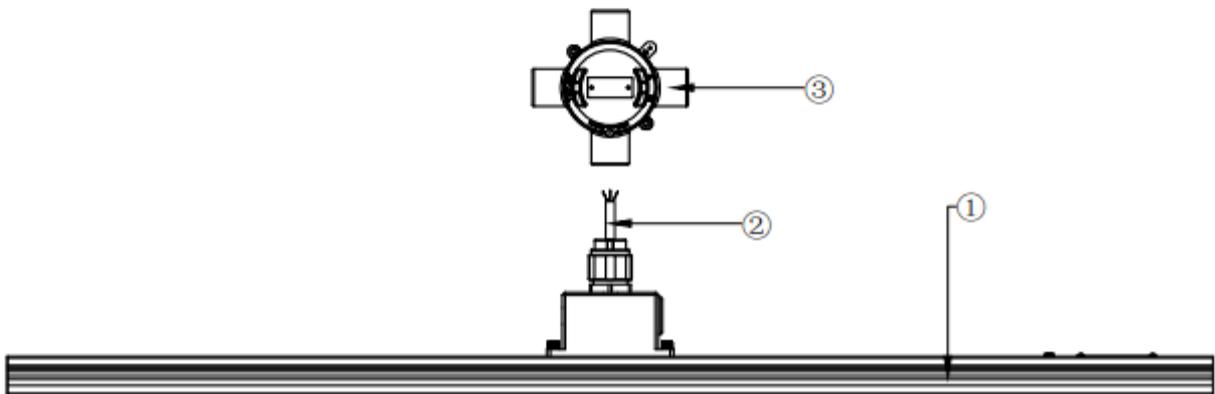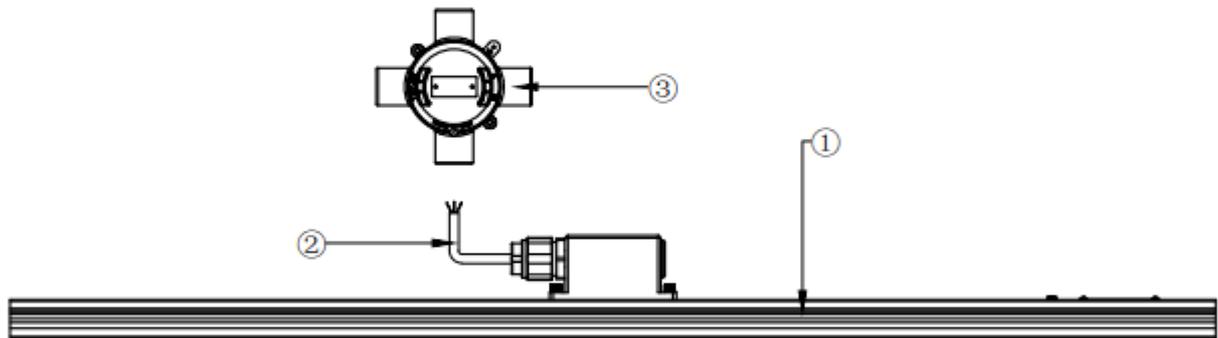



1. For luminaire model with suffix "WHT": Insert the cord (2) through the conduit (not shown, provide in the field) into the Junction Box (3) (provide in the field).
2. For luminaire model with suffix "Street type electrical tube Mounting": Insert the cord (2) through the integral mounting bracket and then through the conduit (not shown, provide in the field) into the Junction Box (provide in the field).
3. Fix and Introduce the wires of luminary with the terminal post of Junction Box (White-wire connects to Neutral; Red-wire connects to Live; Green-wire connects to Ground.)


4.2 Mounting Bracket Installation

4.2.1 Two position Adjustable Trunnion (Wall & Ceiling) Mounting(WHT) - each position with one aiming angle(0 degree 、 25 degree 、 60 degree 、 90 degree)

- Secured to wall/ceiling surface (The projection angle of the lamp can be adjusted according to the angle set by the bracket)

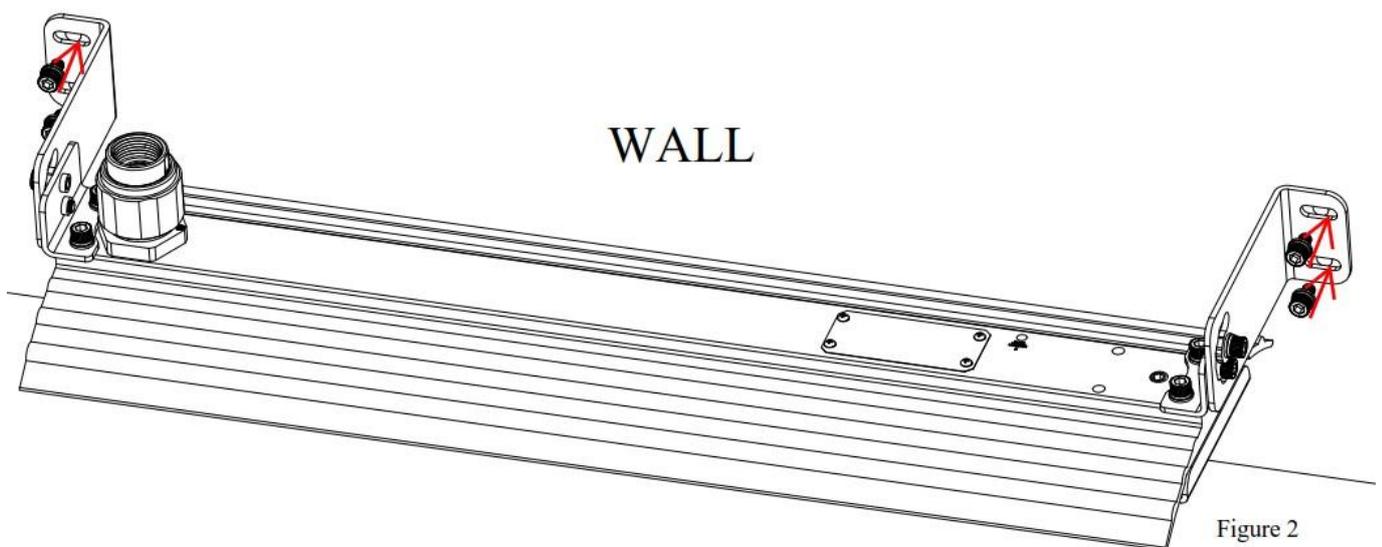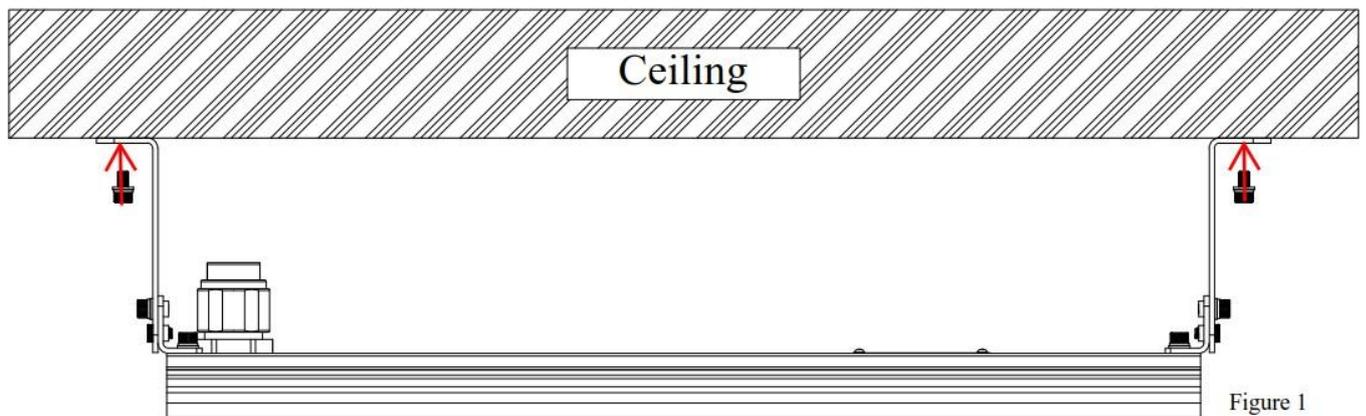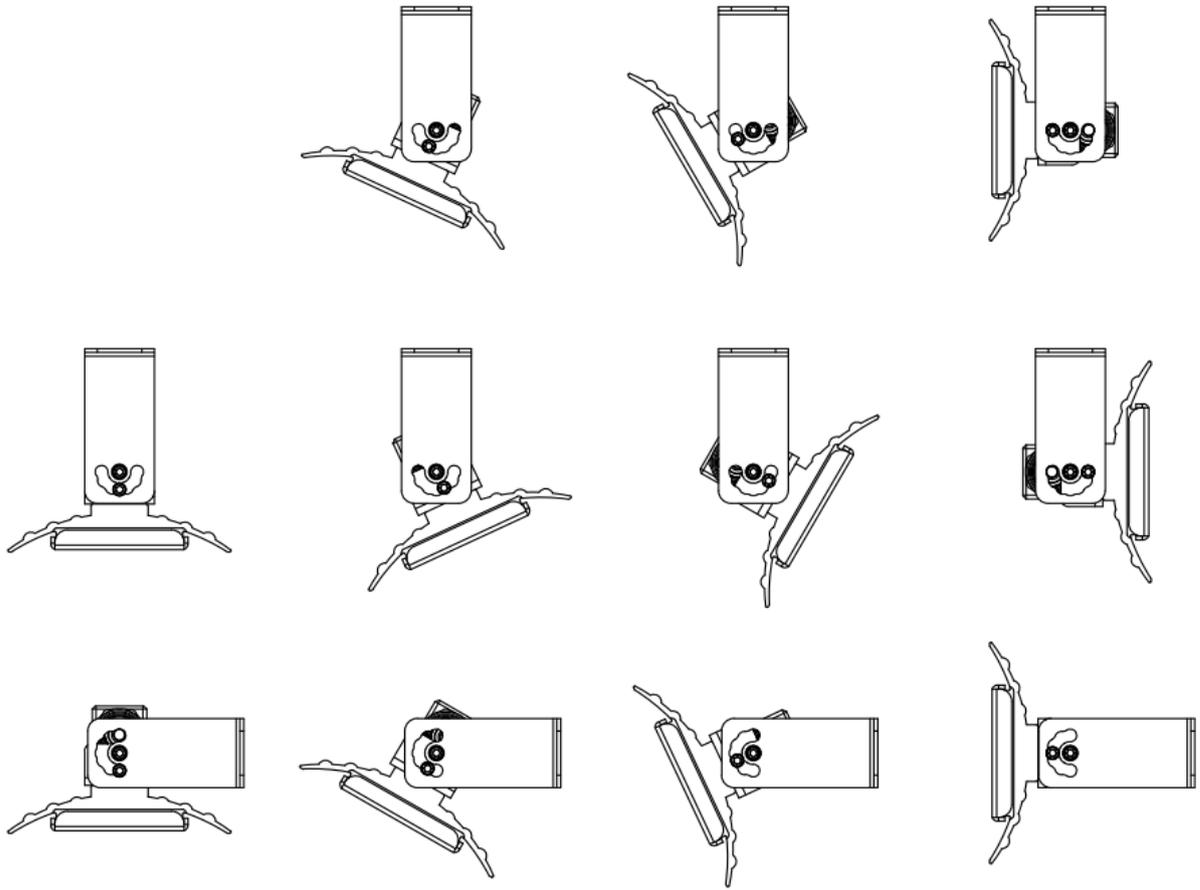
- ☞ The mount bracket is for surface mounting to wall (Figure 1) and ceiling (Figure 2).
- ☞ Position the bracket holders and secured by means of the provided M6 screws with 50 kgf-cm.
- ☞ Secure the wall/ceiling mounting bracket to the mounting surface by using four fasteners (not provided).






4.2.2 Street type electrical tube Mounting

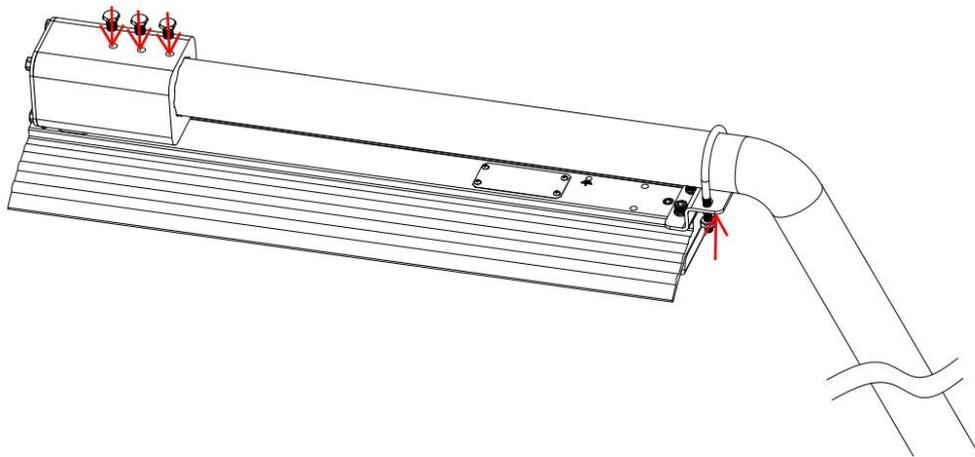
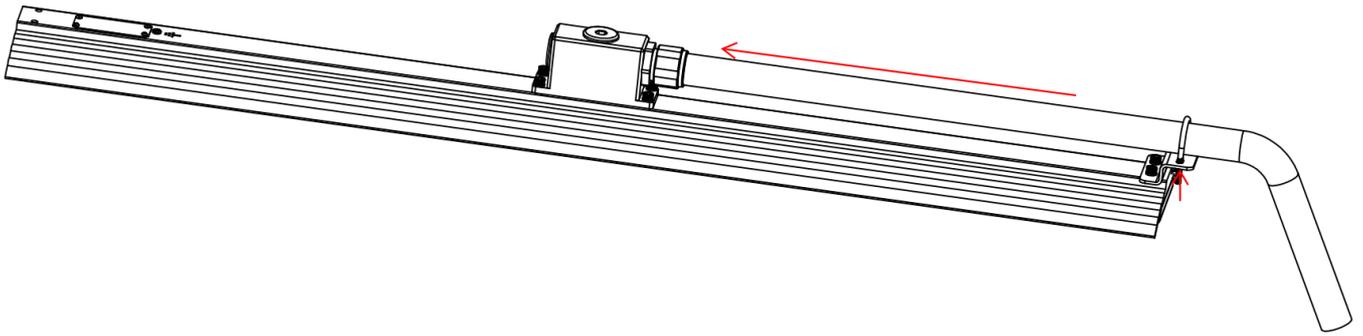
- ☞ Elbow through the pipe clip into the lamp fixing tube, and then fix the lamp above the tube
M8 screws and pipe clamp 1/4 nut lock.





4.2.3 Stanchion type(25° & 90°)

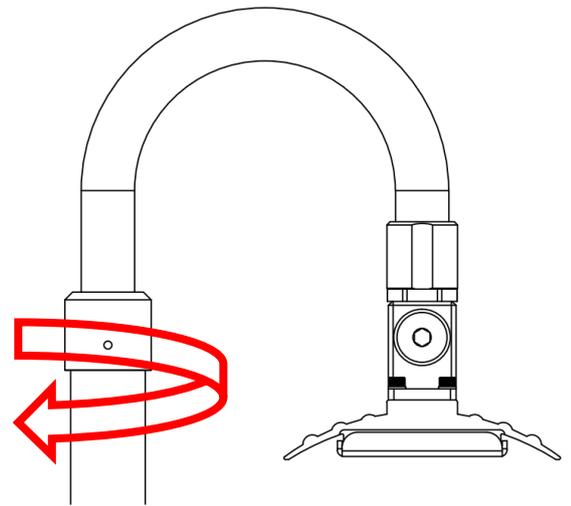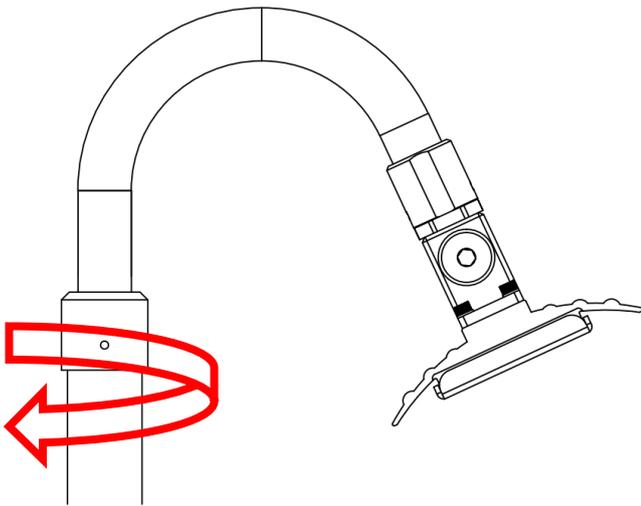- ☞ The pipe thread with thread lock on the stanchion.
(After the installation is completed to confirm the electric tube is locking in the column.)



4.3 Putting into Service

Before putting into operating, it's necessary to ensure that :

- ☞ The lighting is correctly installed.
- ☞ The connection has been correctly made.
- ☞ The field wiring has been inserted correctly.

5. Maintenance

- To avoid personal injury, disconnect power to the light and allow the unit to cool down before performing maintenance.
- Perform visual, electrical, and mechanical inspections on a regular basis. The environment and frequency of use should determine this. However, it is recommended that checks be made at least once a year. Frequency of use and environment should determine this. It is recommended to follow an Electrical Preventive Maintenance Program as described in the National Fire Protection Association Bulletin NFPA No. 70B: Recommended Practice for Electrical Equipment Maintenance.
- The lens should be cleaned periodically to ensure continued lighting performance. Clean the lens with a clean, damp, non-abrasive, lint-free cloth. If this is not sufficient, use a mild soap or a liquid cleaner. Do not use an abrasive, strong alkaline or acid cleaner as damage may occur.
- Inspect the cooling fins on the luminaire to ensure that they are free of any contamination (i.e. excessive dust build-up). Clean with a non-abrasive cloth if needed.
- Electrically check to make sure that all connections are clean and tight.
- Mechanically check that all parts are properly assembled.

6. Transport, Storage and Disposal

- Transport and storage is only allowed in the original packaging, on the way pointed out on the carton box.
- Transport – Shock-free in its original carton, do not drop, and handle carefully.
- Store – Store in a dry place in its original packaging.
- Disposal – Ensure environmentally friendly disposal of all components according to the legal regulations.